


OFFSET

		SLIDING ARM			
		PULLING		PUSHING	
Terrazzo tray	Threshold plate	Example 1		Example 5	
	Terrazzo tray	Example 2		Example 6	
	Threshold plate	Example 3		Example 7	
	Terrazzo tray	Example 4		Example 8	

DOOR LEVER

		STANDARD 15mm - PLUGGED			STANDARD - WELDED		
OFFSET	Threshold plate	Example 9		Example 13			
	Terrazzo tray	Example 10		Example 14			
	Threshold plate	Example 11		Example 15			
	Terrazzo tray	Example 12		Example 16			

CENTER

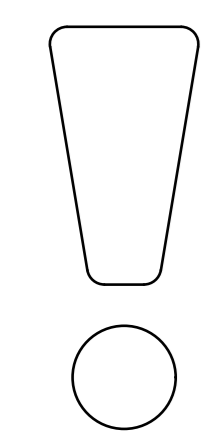

PLEASE NOTE:

All above shown example are rough guidelines and might not reflect necessary install requirements. Correct installaton is in subject to, positioning, weight, hinge-location, door leaf design and width as well is dependend on adjacent jambs or walls etc. Therefore correct installation is your own responsibility.